

USER INSTRUCTION

Art.3111 Telephone



Three position volume control:

Use this to adjust the incoming call volume.

- HIGH
- MEDIUM
- LOW

Door release button:

Pressing this button at any time will release the door. (With or without the handset lifted.)

Service Button:

Normally Open Push Button which can be used to trigger other devices, such as gates, lights door strikes etc.

IMPORTANT NOTE: The incoming call tone comes out of the telephone ear piece.

Do not hold the hook switch down while holding the telephone to your ear.

STEP 1

An incoming call will be signalled by an audible tone from the handset

STEP 2

Pick up the handset and speak with the caller

STEP 3

To open the door press the  button. To end the call simply hang up