

# USER INSTRUCTION

## Art.3151 Telephone



**Three position volume control:**

Use this to adjust the incoming call volume.

- HIGH
- MEDIUM
- LOW

**Door release button:**

Pressing this button at any time will release the door. (With the handset lifted.)

**Service Button:**

Normally Open Push Button which can be used to trigger other devices, such as gates, lights door strikes etc.

**IMPORTANT NOTE:** The incoming call tone comes out of the telephone ear piece.

Do not hold the hook switch down while holding the telephone to your ear.

 
**STEP 1**

An incoming call will be signalled by an audible tone from the handset

**STEP 2**

Pick up the handset and speak with the caller

**STEP 3**

To open the door press the  button. To end the call simply hang up